JOINT RECONSTRUCTION

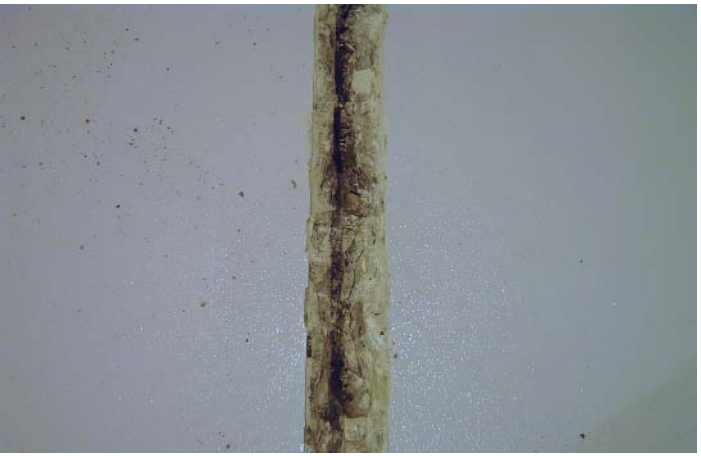

Joint is Chipped Out

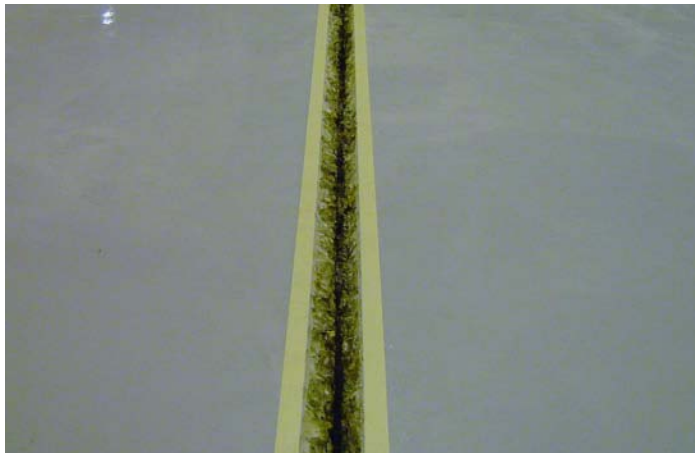

Epoxy Primer Applied to Joint

Joint is Filled Level with Epoxy Mortar

Joint is Then Saw Cut

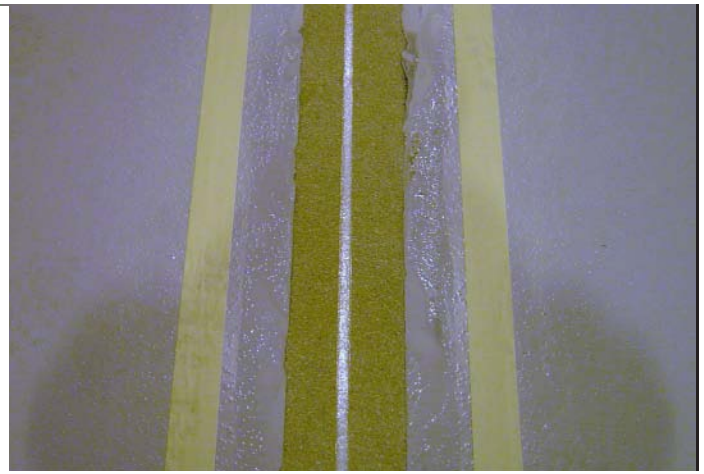

Joint is Filled with Semi-Rigid Epoxy

Newly Coated Floor with Repaired Joints